



900 Sycolin Rd, Suites #130 Leesburg, VA 20175
USA

571-578-3075 ▪ uv@eit20.com ▪ www.eit20.com

SPOTCURE® UV INTENSITY METER

OPERATING INSTRUCTIONS

1. Select the properly sized adaptor for the light guide, and install it in the measurement head of the SPOTCURE® UV INTENSITY METER.
2. Grip the SPOTCURE® UV INTENSITY METER in the left hand, and position with thumb on the “START” button.
3. Insert light guide into the light guide opening on the measurement head of the SPOTCURE® UV INTENSITY METER.
4. Press and hold the “START” button.
5. Open the shutter on the UV light source.
6. Release “START” button. After “START” button is released, the displayed UV intensity reading will be held for approximately 3 minutes or until the “START” button is pressed again.
7. Close the shutter on the UV light source.
8. Remove the light guide from the measurement head.

MAINTENANCE and WARRANTY

If the light guide opening becomes dirty, it may be cleaned with a cotton swab moistened with isopropyl alcohol. After cleaning, dry the window with a clean cotton swab.

EIT 2.0 LLC recommends that the SPOTCURE® UV INTENSITY METER be returned to EIT 2.0 for calibration once every six months. The warranty period for the SPOTCURE® UV INTENSITY METER is 6 months from the date of purchase, except for abuse or neglect. There are no user serviceable parts inside this unit.

SHIP TO ADDRESS FOR CALIBRATION OR REPAIR

EIT 2.0 LLC dba EIT LLC
900 Sycolin Rd, Suite #130
Leesburg VA 20175 USA
Telephone: 571-578-3075
Web: www.eit20.com
Service Email: calibration@eit20.com

Instrument Made in USA

SAL-M1001 Rev. 1.2 July 2023